

Quick User Guide



POWER BUTTON

POWER ON/OFF: HOLD THE POWER BUTTON 3 SECONDS

START/STOP: PRESS THE POWER BUTTON 1 TIME



PRESET BUTTON

THE FLY V3 HAS 4 CHANNELS FOR SAVING VOLTAGE SETTINGS
PRESS THE PRESET BUTTON TO SELECT THE 4 PRESET VOLTAGES

TO SAVE PRESET VALUES:

1. USING "PRESET" BUTTON TO THE CHANNEL 1,2,3 OR 4
2. USING "+/-" BUTTONS, SET THE DESIRED VOLTAGE.
3. PRESS AND HOLD THE "PRESET" BUTTON FOR 3 SECONDS

HOLD   TO ENABLE/DISABLE JUMP START FUNCTION