


ELITE PS350

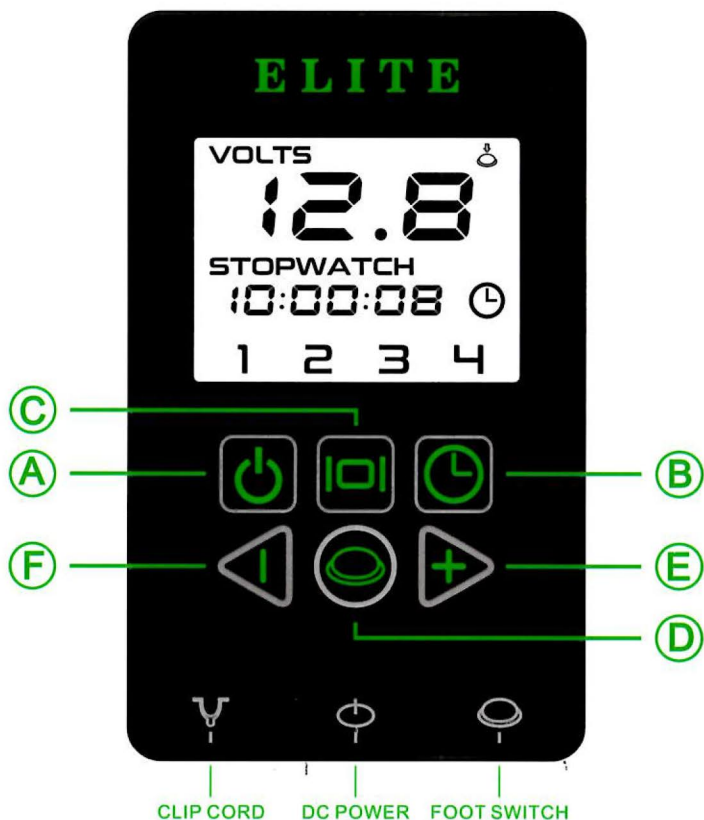

A: Power Button

B: Timer Button

C: Preset Button

D: Footswitch Mode Button

E: Voltage Increase

F: Voltage Decrease



Power Button

Power On: press the "Power" button

Power Off: press and hold the "Power" button for 3 seconds until the second audio chime sounds



Timer Button

Timer Button is used to start/stop the timer function.

START: The timer indicator is displayed steady

STOP: The timer indicator is displayed flash

Press and Hold the Timer Button 3 seconds, the timer will reset to 0:00:00



Preset Button

The Ps350 has 4 channels for saving your favorite voltage settings. The unit is pre-configured with 2,4,6 and 8 volts saved as a factory setting.

Press the "Preset" button to select the 4 preset voltages.

To save preset values:

1. Using "Preset" button to the Channel 1,2,3 or 4
2. Using "+/-" buttons, set the desired voltage.
3. Press and hold the "Preset" button for 3 seconds until the second audio chime sounds.



Footswitch Mode Button

The mode button allows you to switch the foot switch between Momentary and Maintained modes.

Momentary: it provides the push-and-hold foot switch

Maintained: it allows the tattoo machine to be turned on and remain on until pressed again.