

01

TURN ON

As soon as you touch the knob, **COMPAKT** will automatically start working in free mode. Simply rotate to tune the appropriate intensity.

02

PRESETS

Activate
Double click.

Edit & Save
Press the knob for 2 seconds & tune the intensity. Tap once to save.

Exit
Double click.

03


CONTINUOUS MODE

Turn on & off the footswitch continuous mode by simply pressing the knob.

04

TURN OFF

Hold the knob for 5 seconds.

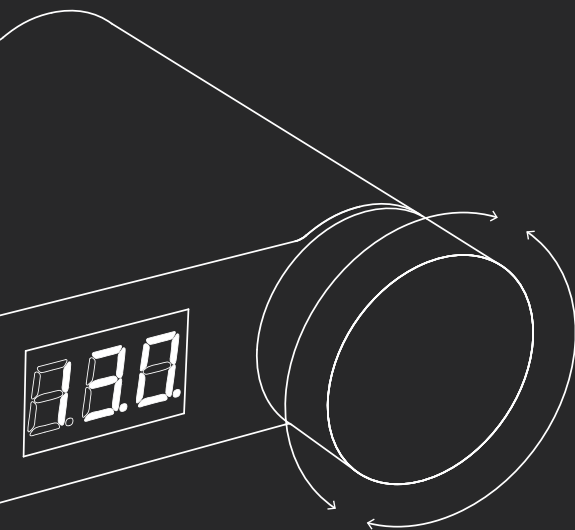

HUNGER FOR MORE PERFORMANCE

Check out
the tutorial



[bit.ly/
compaktpiranha](https://bit.ly/compaktpiranha)