

## User Manual for Remote Control Adjustments

### Remote control functions:

**Pairing:** The lamp can be remote-controlled after pairing with the remote controller. Up to 4 sets of pairing information can be stored, and the earliest one will be covered when pairing exceeds 4 sets.

**Unpairing:** The remote control relationship between the controller and the corresponding lamp will be removed after unpairing.

**Brightness adjustment:** The brightness can be increased or decreased by pressing the brightness adjustment buttons on the remote controller.

**Color temperature adjustment:** The color temperature of light can be increased or decreased by pressing the brightness adjustment buttons on the remote controller.


### Operational instructions:

#### ➤ **Pairing:**

Turn off the lamp power or wall switch, press the "on" button on the remote controller for 3-5 seconds, then turn on the lamp or power switch. The lamp will flicker, which indicates the success of pairing.

#### ➤ **Unpairing:**

Turn off the lamp power or wall switch, press the "off" button on the remote controller for 3-5 seconds, then turn on the lamp or power switch. The lamp will flicker, which indicates the success of unpairing.

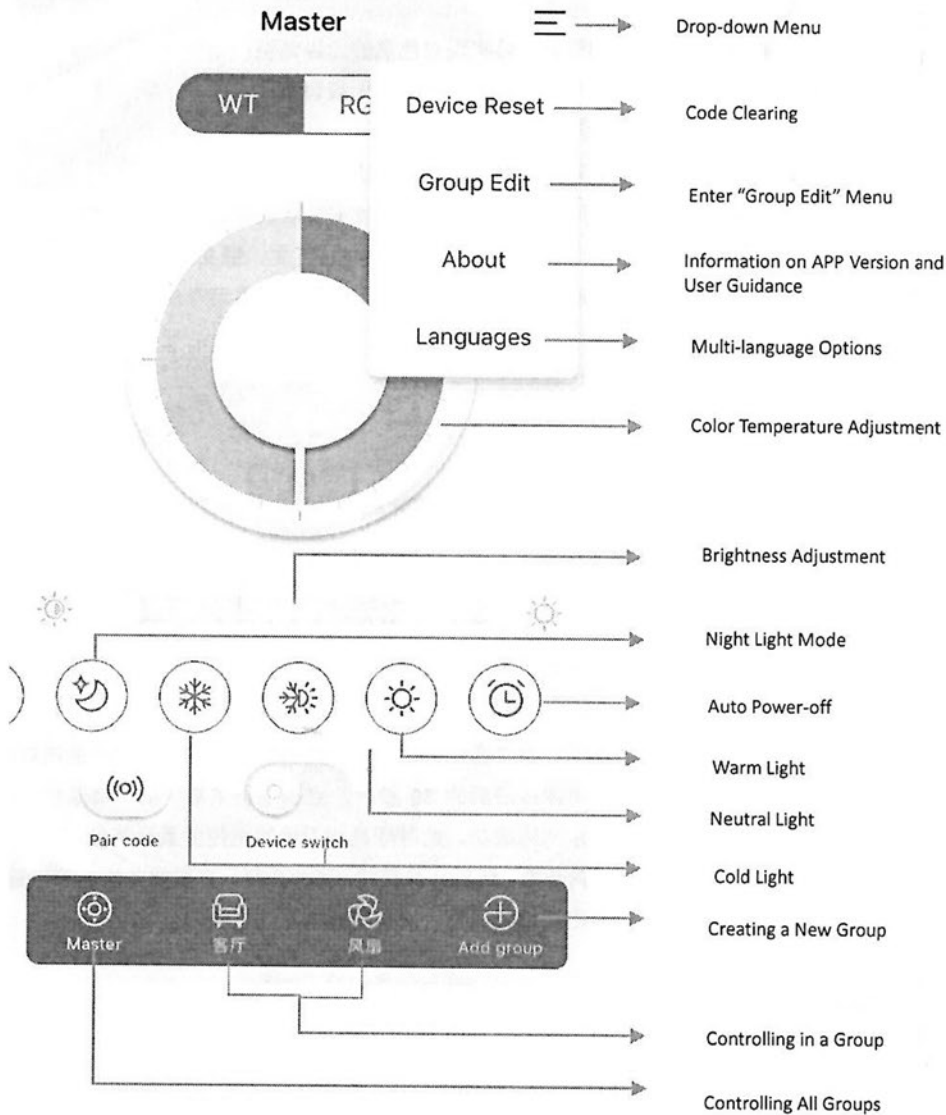

QR Code for iOS



QR Code for Android



### Description of Functions:

- **Dropdown Menu:** A dropdown menu will come up by tapping.
- **Color Temperature Adjustment:** Stepless adjustment on color temperature is achieved by moving the color temperature pointer;
- **Brightness Adjustment:** Stepless adjustment on brightness is achieved by moving the brightness pointer;
- **Auto Power-off:** Timed power-off is activated through a countdown;
- **Group Edit:** Groups can be modified or deleted through the "Group Edit" Menu;
- **Language Setting:** The language can be switched through this menu with Simplified/Traditional Chinese, English and Russian available, and the default language is same as the system language;
- **Code Pairing:** The lamp can be remote-controlled after code pairing with the smartphone. Up to 4 pair codes can be stored for each lamp, and the earliest one will be overwritten when the number of pairing codes exceeds 4;
- **Code Clearing:** The remote control relationship between the smartphone and the corresponding lamp will be removed after code clearing.

### Operation Instructions:

- **Creating a New Group:** Tap "Add group" at lower right, and select "+Custom" in "Group". Then enter the name of this group, and tap "OK". The new created group will come up in the lower panel.
- **Code Pairing:** In a specific group page (e.g., living room), turn off the lamp, then turn on. Within 30 seconds after the power is on, tap the "Pair code" button at lower left, and the lamp will flicker for 3 times, indicating the success of pairing. Now the lamp is included in this group and any lamp included can be controlled at both group page or master page.
- **Code Clearing:** In a specific group page (e.g., living room), turn off the lamp, then turn on. Within 30 seconds after the power is on, tap the "Device reset" button in the dropdown menu, and the lamp will flicker for 3 times, indicating the success of unpairing.
- **Resume to Default Settings:** Turn off the lamp, then turn on. Repeat until the power is on for the 4th time. The lamp will flicker for 3 times, indicating the lamp has been resumed to default settings, and all pair codes has been removed.

**Note:** Do not perform "Code Pairing" or "Code Clearing" at master page.