


WIRELESS FOOTSWITCH(MT)

OVERVIEW

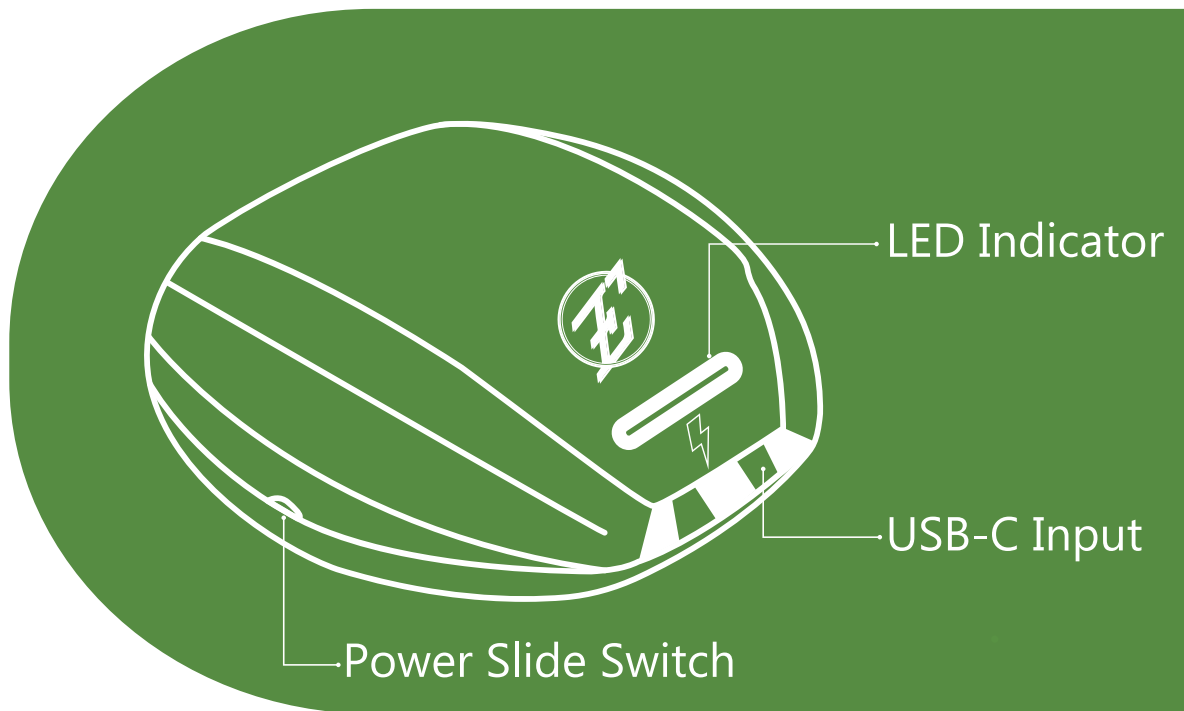

FEATURES

- 1) Compatible with P3 Pro/P2S Pro/EvoTech Pro and More To Come.
- 2) Multi-Color LED Indicates Bluetooth Connection Status.
- 3) Solid Construction and Innovative Minimalistic Design.
- 4) Non-Slip Rubber Bottom for Enhanced Stability.

SPECIFICATION

Dimensions(L x W x H)	89 x 84 x 30 mm
Charging Voltage	5V
Weight	6.6oz (187g)
Charging Port	USB-C
Recharging Time	2hours
WorkingTime	Up to 120hours

LED INDICATOR STATUS

- 1) **Scanning Mode:** Red And Blue Lights Alternately Flash.
- 2) **Connection Succeeded:** Blue Light Blinks (1 Blink Per Second).
- 3) **Low Battery Warning:**
Battery Level Below 20%, Red Light Flashes Rapidly.
Battery Level Below 5%, Red Light Stays On Continuously."
- 4) **Device Malfunction:** Red And Blue Lights Stay On Simultaneously.
- 5) **Charging:** White Light Stays On.
- 6) **Fully Charged:** Yellow Light Stays On.

INSTRUCTION

Use The Wireless Footswitch To Start/Pause The Wireless Tattoo Pen Machine.

POWER ON/OFF

Slide The Switch To Turn On/Off.

PAIRING

- 1) Turn On The Footswitch. The Flashing Red And Blue Lights Indicate That The Footswitch Is Ready For Pairing.
- 2) Ensure That The Device's Bluetooth Mode Is Enabled. It Will Automatically Connect To Your Footswitch.
- 3) Once Connected, The Flashing Blue Lights On The Footswitch Will Indicate A Successful Connection.

WORKING MODE

There Are Two Distinct Working Modes Of The Footswitch.

Maintain Mode

In This Mode, Tap And Hold The Footswitch To Keep The Machine Running. Release The Footswitch To Pause The Device. Please Refer To The Tattoo Machine's Manual For Activation Instructions.

Momentary Mode

In This Mode, A Single Tap Will Start Or Pause The Device. Please Refer To The Tattoo Machine's Manual For Activation Instructions.